


ON-CAR INJECTOR FLOWBENCH

Quick Use Reference Guide

- 1** **Connect the tester to a power source**
 - Battery
 - Accessory outlet
 - User Guide pages 16 – 17
- 2** **Connect the tester to the fuel injectors**
 - At PCM connector
 - Direct connect
 - User Guide pages 19 – 21
- 3** **Connect the tester to fuel pump control**
 - At PCM connector
 - At FP relay
 - Direct connect
 - User Guide pages 23 - 25
- 4** **Connect the tester to the fuel rail**
 - User Guide page 27
- 5** **Select the desired test**
 - MFI
 - SCPI
 - User Guide pages 29 - 40
- 6** **Review the test results**
 - On screen
 - Upload to computer
 - User Guide pages 32, 38
- 7** **Drain the Fuel Management Unit**
 - User Guide pages 53

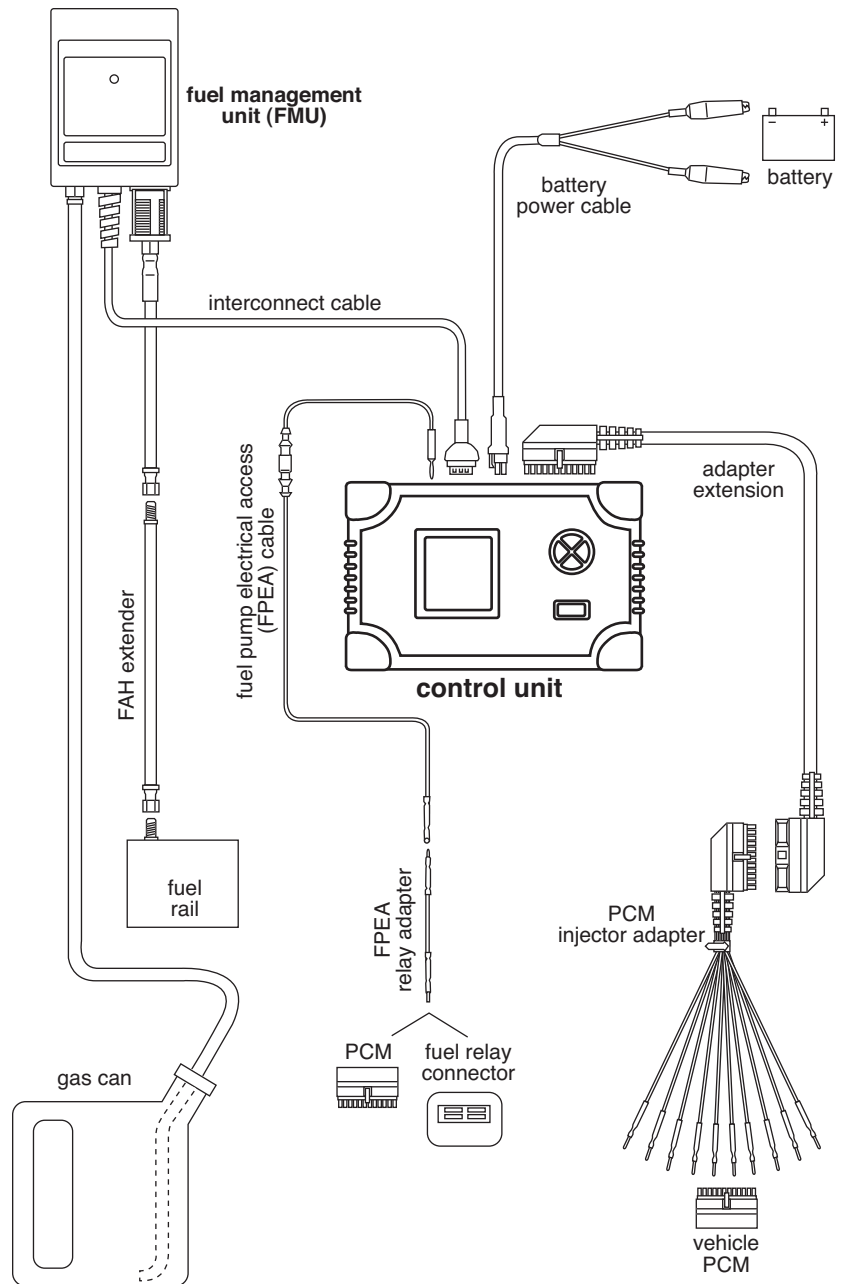

Note: Use the direct injector harness (not shown) for direct connections to the injectors.